CC-17/ WT-17 Quick Reference guide




I How to use the CC-17/WT-17

■ Carrying Case CC-17

You can work as soon as you open the CC-17.




■ Working tray WT-17

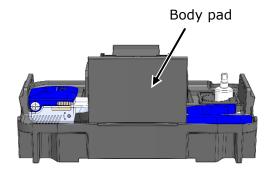

1. Attach the body pad to the tray.

Neck strap hole Cleaver Strap hole

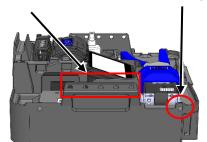

2. Hook the strap in one of the strap holes as highlighted in red in the above figure.



3. Place the strap around your neck.

Other convenient functions







Upper stack

Waist belt

I How to take out/attach the fusion splicer to WT-17

This page describes how to remove/attach the fusion splicer to WT-17.

■ How to take out the fusion splicer



1. While holding the fusion splicer, pull the lever.




2. Lift the fusion splicer while pulling the lever.



Remove the fusion splicer towards you while pulling the lever.

How to attach the fusion splicer

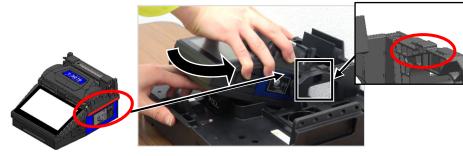

 As shown in the picture left, install the fusion splicer by passing the red-lined section under the red-circled protrusion.



2. Pull the lever and place the fusion splicer on the WT-17 properly.



3. Try to move the splicer after it is locked in place to ensure it is fully secured to the WT-17.

Make sure the splicer is properly secured.





NG
The splicer is lifted as it is attached in a wrong way.



NGThe splicer is shaky as it is not locked properly.



If the fusion splicer is not securely attached to the WT-17, it may fall.

Sumitomo Electric Industries, Ltd. reserves the right to change the specification or design without notice and may therefore not coincide with the contents of this quick reference guide. E&OE For further detailed operating instructions and functions, please see Operation manual. The Operation manual can be downloaded via

OME2024181-2 /Ver.1.01

