



# Core Alignment Fusion Splicer Quick Reference Guide


## What's included

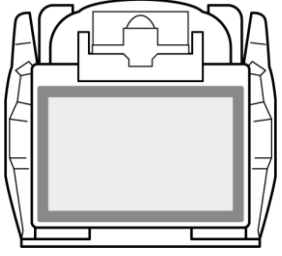


Fusion splicer

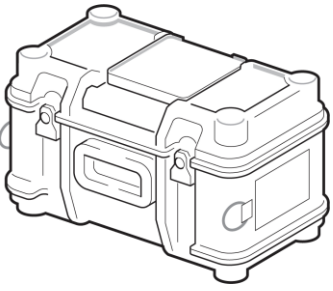


Carrying case

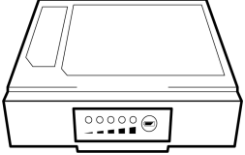

Battery pack

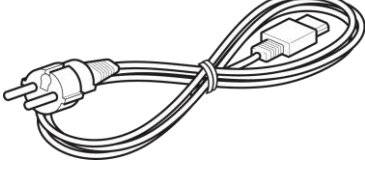


Power cord

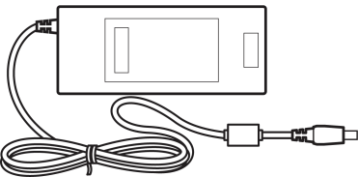


AC adapter



Electrodes

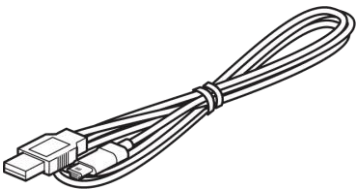

USB cable

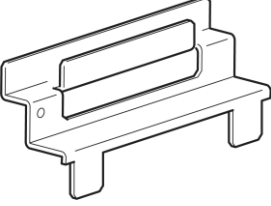


Cooling tray




Quick reference guide

## Getting started


① Open the battery slot cover located at the bottom of the splicer and insert the battery pack. Close and lock the cover.

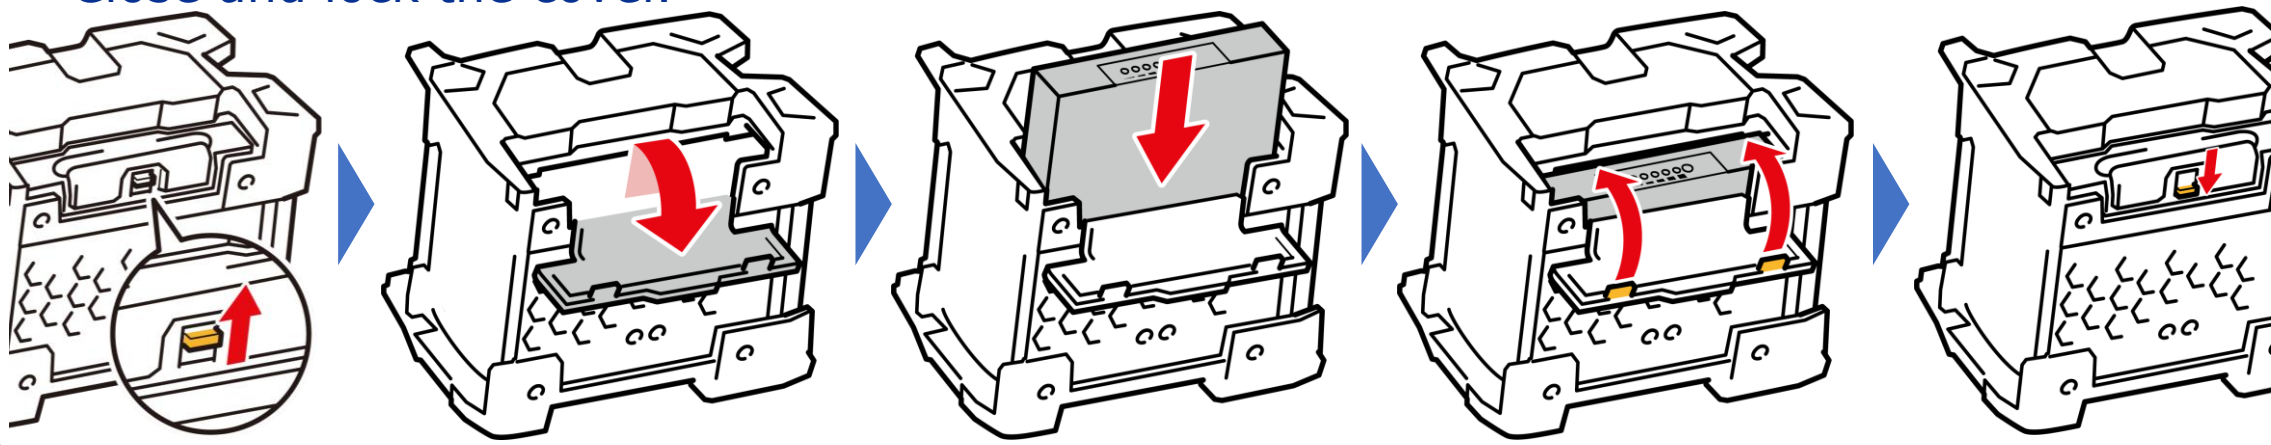



② Connect the AC adapter to the splicer to charge the battery pack.

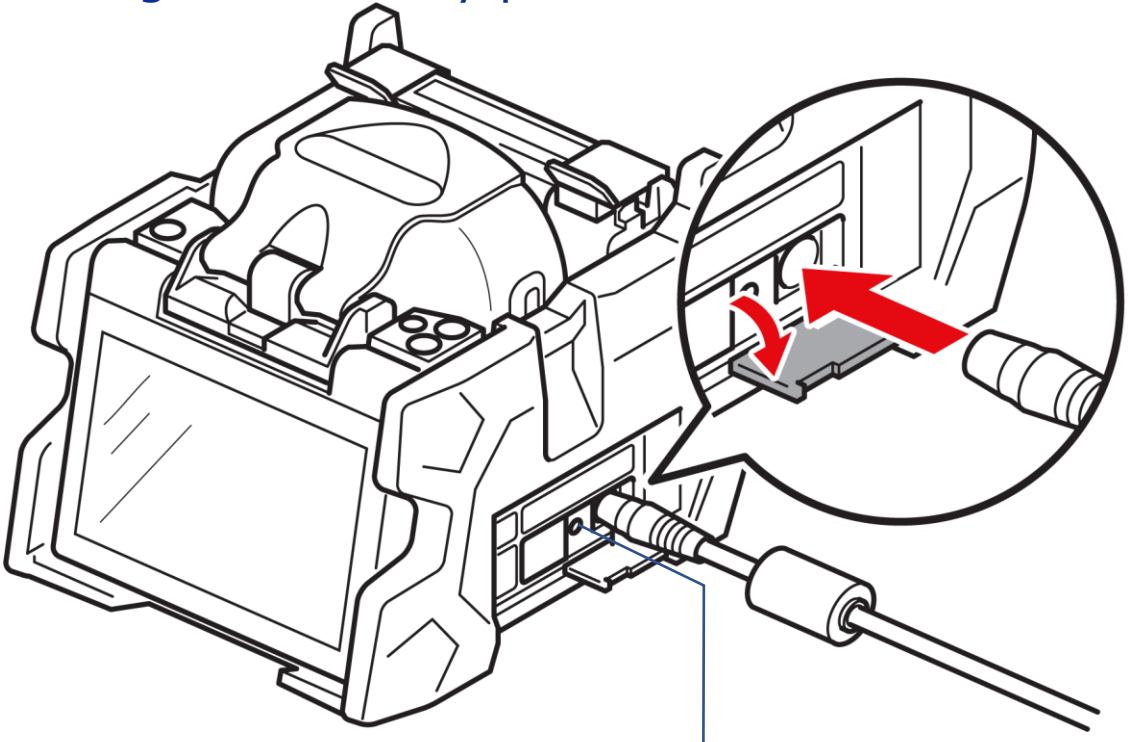


How to check battery capacity left

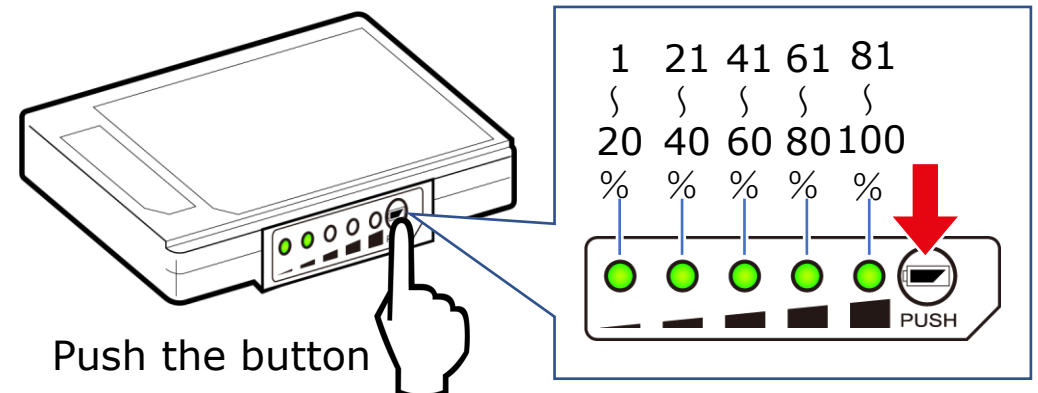


③ Press the POWER key.  
④ The splicer turns on.

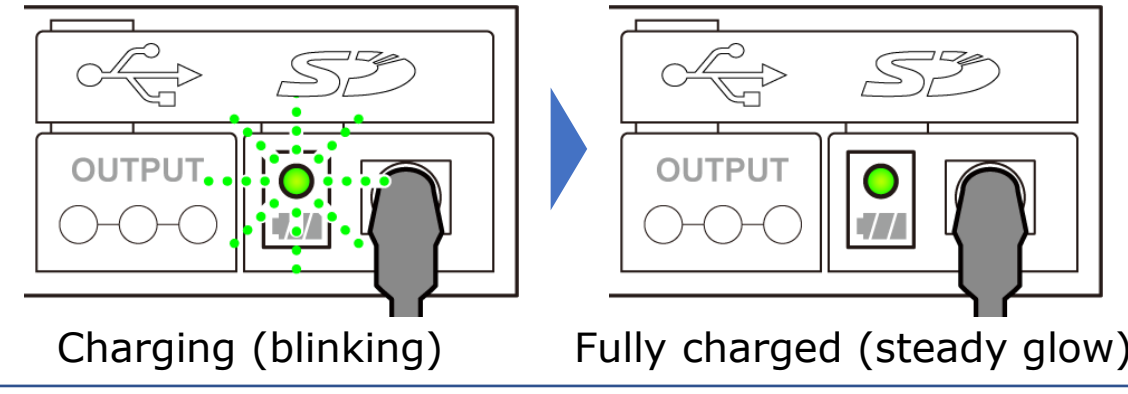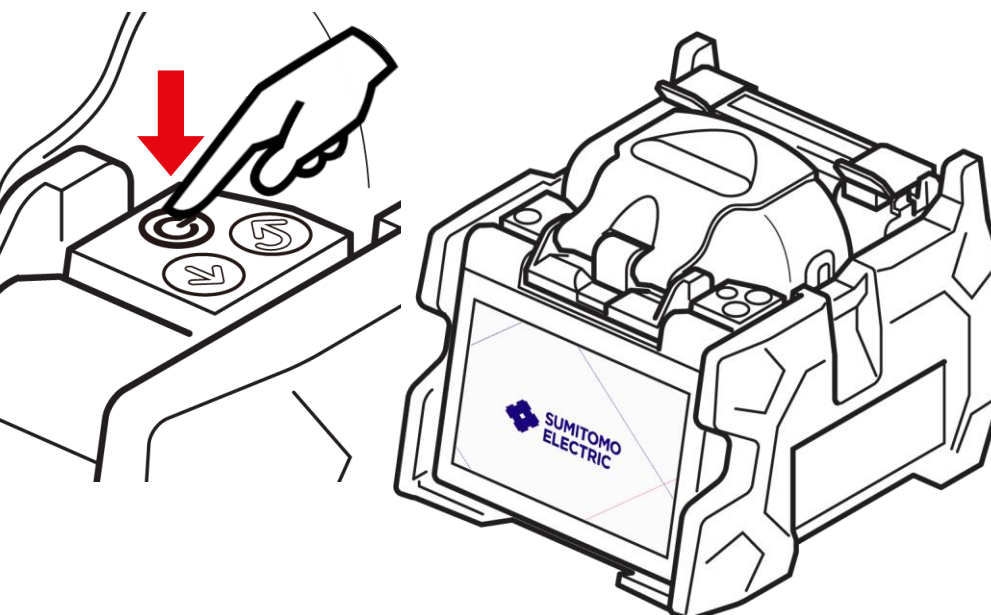

⑤ The splicer shows thumbnails of tutorial videos.

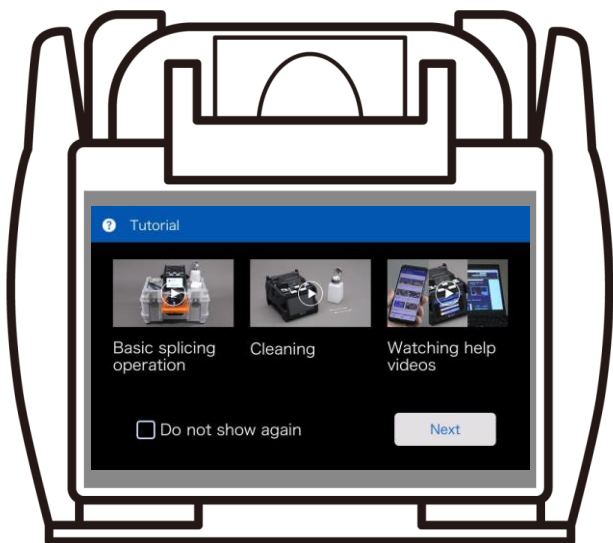

⑥ Tap the thumbnail to play the video.

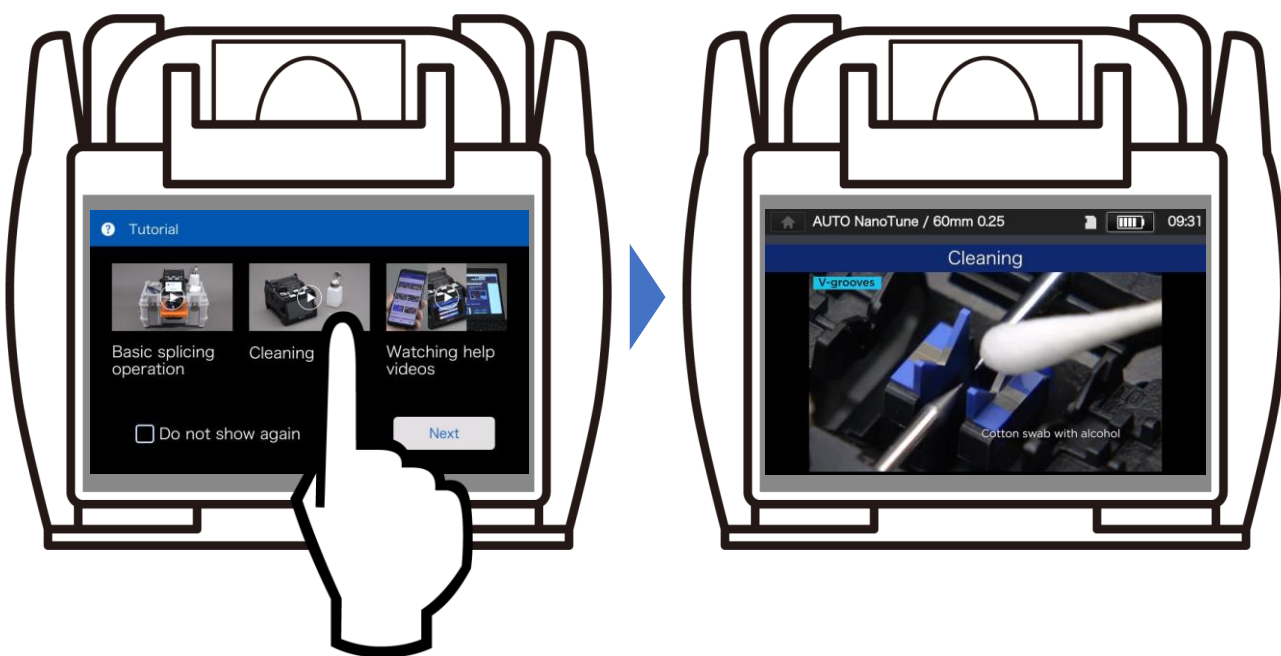


## Utilizing Help Videos

On the splicer



Also available online

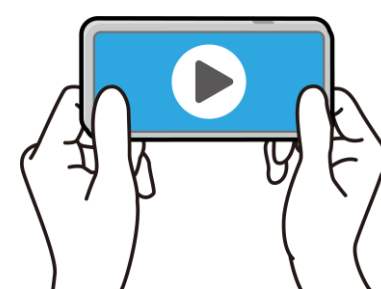


### Video contents

#### Basic operation



Inserting the fibers into the splicer

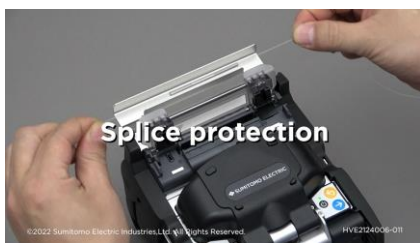

Splice protection

#### Cleaning



V-grooves



Heat shrink oven

#### Consumables




Replacing the electrodes

#### Software update



On a computer

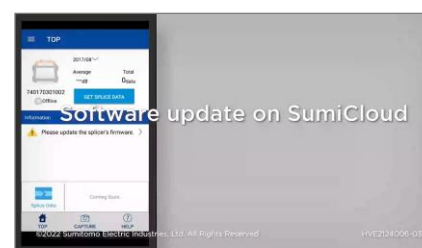

On SumiCloud

... and more in the list.

