



Optical Fiber Cleaver

# FC-6R

## Operation Manual

### IMPORTANT SAFETY PRECAUTIONS

This product has been designed and manufactured to assure personal safety. Improper use can result in bodily injury and serious damage to the fiber cleaver. Please read and observe all warnings instructions given in this operation manual.



This symbol indicates explanations about dangerous matters. If users ignore this symbol and handle the cleaver the wrong way, bodily injury and damage to the cleaver could result.

1. Do not disassemble or lubricate any parts of the cleaver. Doing so can cause serious damage to the cleaver.
2. The FC-6R is a precision tool. Do not impact the cleaver by hitting or dropping it. Doing so can cause personal injury and loss of cleaving performance.
3. Glass fiber fragments are extremely sharp. Handle with care. Wear safety glasses at all times during cleaving operation for protection from glass fibers.
4. Dispose of glass fiber fragments properly.
5. The blade of the cleaver is extremely sharp. Do not touch it with bare hands.
6. Do not impact the top clamp lever and switching lever. Doing so can cause damage to the levers and loss of cleaving performance.
7. Do not attempt to push further the blade carriage which has been in the rear of the cleaver. Doing so can cause loss of cleaving capability and performance.
8. If the cleaver is damaged or a problem occurs, please contact our service department.

### 1. General

#### Specification

	FC-6RS / FC-6RS-C
Cladding Diameter	125μm
Fiber Count	Single fiber (0.25 & 0.9mm)
Coating Diameter	
Cleave length	5~20mm (0.25mm), 10~20mm (0.9mm)
Cleaving position	24 positions
Blade rotation function	Fixed / Automatic rotation/ Manual rotation
Dimensions	FC-6RS: 63(W)x77(D)x63(H)mm FC-6RS-C: 100(W)x81(D)x63(H)mm
Weight	FC-6RS: Approx. 380g FC-6RS-C: Approx. 420g

	FC-6RM / FC-6RM-C
Cladding Diameter	125μm
Fiber Count	Single fiber (0.25 & 0.9mm)
Coating Diameter	Up to 12-fiber ribbon
Cleave length	10mm
Cleaving position	24 positions
Blade rotation function	Fixed / Automatic rotation / Manual rotation
Dimensions	FC-6RM: 63(W)x77(D)x63(H)mm FC-6RM-C: 100(W)x81(D)x63(H)mm
Weight	FC-6RM: Approx. 380g FC-6RM-C: Approx. 420g

#### Standard package


	FC-6RS	FC-6RS-C	FC-6RM	FC-6RM-C
Optical Fiber Cleaver FC-6R	1 pc	1 pc	1 pc	1 pc
Carrying case	1 pc	1 pc	1 pc	1 pc
Operation Manual	1 pc	1 pc	1 pc	1 pc

#### Optional accessories / Consumables


FC-6RS	FC-6RS-C
Fiber off-cut collector: CU-FC6R	
FC-6RM	FC-6RM-C

Single fiber adapter: AP-FC6M  
Fiber off-cut collector: CU-FC6R

### 2. Structure

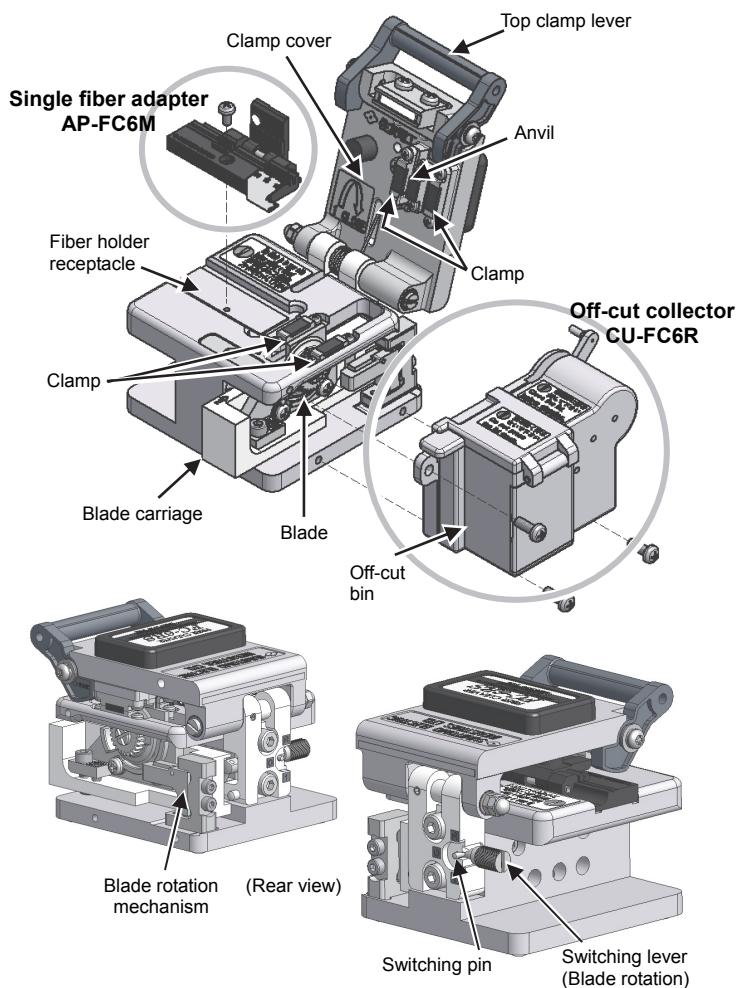

< Fiber cleaver FC-6RS(-C)/6RM(-C) >

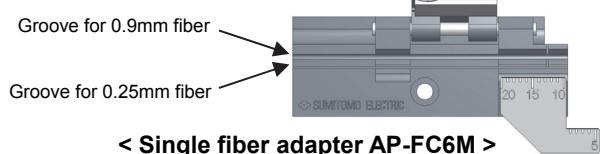


< Single fiber adapter AP-FC6M >


### 3. Operating procedures

#### FC-6RS(-C)

- 1: Open the top clamp lever and the lid of the single fiber adapter. The blade carriage should be in the forward position.

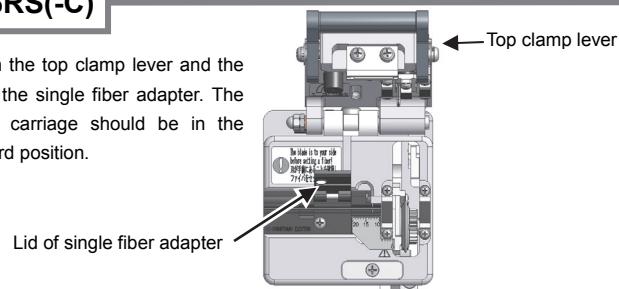


- 2: Lower the fiber straight into the correct V-groove with the end of the fiber coating (e.g. if the cleave length is 16mm) at the 16mm mark on the ruler.

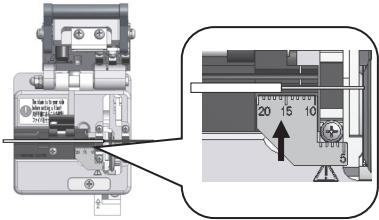


3: Close the lid of the single fiber adapter.

4: Lower the top clamp lever. Slide the blade carriage to the rear of the cleaver.  
The fiber will be cleaved.

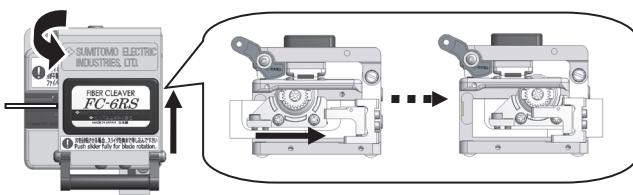


5: Open the top clamp lever. Then open the lid of the single fiber adapter and lift the newly cleaved fiber. Lift the off-cut and dispose it properly. (The FC-6RS-C automatically collects an off-cut in the off-cut collector.)

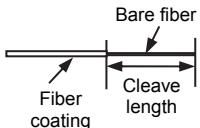


## FC-6RM(-C)


1: Open the top clamp lever.  
The blade carriage should be in the forward position.

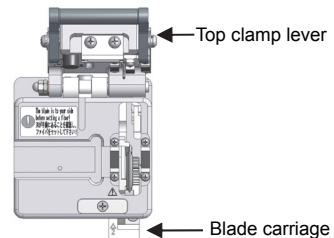

2: Place the fiber holder in the cleaver. Place the edge of the fiber holder against the edge of the fiber holder receptacle.

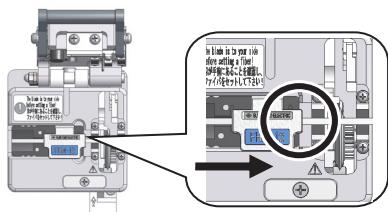

3: Lower the top clamp lever. Slide the blade carriage to the rear of the cleaver.  
The fiber will be cleaved.

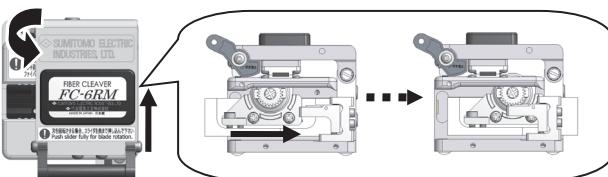

4: Open the top clamp lever. Remove the fiber holder from the cleaver. Lift the off-cut and dispose it properly. (The FC-6RM-C automatically collects an off-cut in the off-cut collector.)

## Switching of blade rotating operations

Blade rotating operation can be set by bringing the switching pin to a given position.


### <Blade rotating operations>

Fixed	
Automatic rotation	
Manual rotation	

### 0 Fixed (Default setting)

#### Blade is not rotated.


The blade is fixed and not rotated.  
If a certain area of the blade cannot cleave fiber, rotate the blade with "Automatic rotation" or "Manual rotation" option, referring to the next sections.

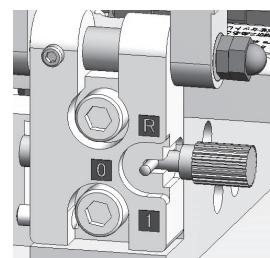

### R Automatic rotation



#### Blade is rotated by approx. 15° with each cleave.

1: As illustrated in the figure below, pull the switching lever to the right and turn it upwards to bring the switching pin to [R].

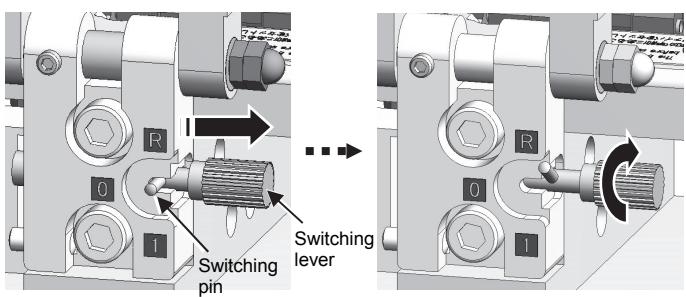


(Continued to page 3.)

2: After sliding the blade carriage to make a cleave, push it further to the rear of the cleaver. The blade is automatically rotated by approx. 15° every time this operation is performed. If you would like to stop "Automatic rotation", bring back the switching pin to [0].

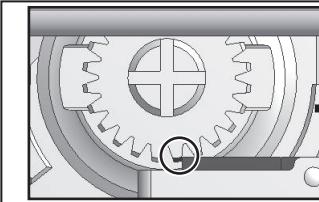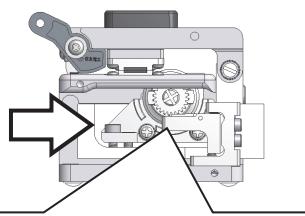

The blade carriage is slid to cleave fiber.

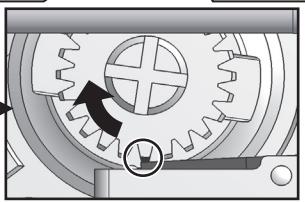

The blade carriage is pushed further to the rear of the cleaver.




**Ensure that the blade carriage is completely pushed to the rear of the cleaver. Otherwise the blade is not rotated.**



## 1 Manual rotation

**The blade is rotated by 1/24 turn (approx. 15°) once. After the rotation, blade rotating operation returns to [0 Fixed].**


1: As illustrated in the figure below, pull the switching lever to the right and turn it downwards to bring the switching pin to [1].

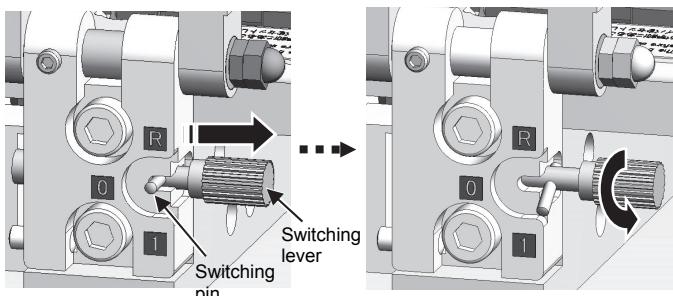

2: After sliding the blade carriage to make a cleave, push it further to the rear of the cleaver. The blade is automatically rotated by approx. 15° (to a new scoring position).

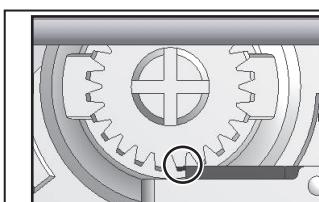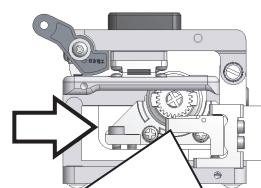

The blade carriage is slid to cleave fiber.

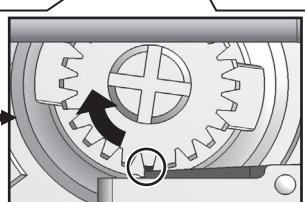

The blade carriage is pushed further to the rear of the cleaver.




**Ensure that the blade carriage is completely pushed to the rear of the cleaver. Otherwise the blade is not rotated.**

Caution

(Continued to step 3.)


3: When the blade carriage is slid back to the front, the switching pin automatically returns to [0]. (No need to bring back the switching pin manually.) Thereafter the blade is fixed.

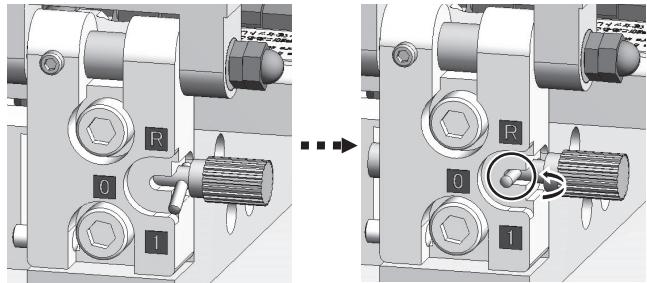


## 4. Maintenance

### Cleaning

To keep excellent cleaving quality, cleaning must be performed after use. Clean the blade edge, the rubber pad of the clamp and the anvil with a cotton swab moistened with isopropyl alcohol.

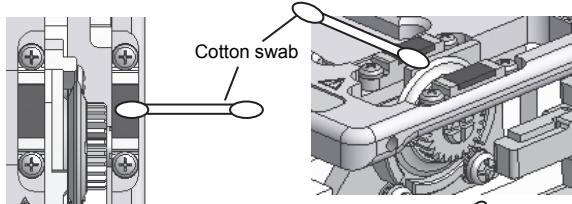

Clean the fiber holder receptacle and the grooves of the single fiber adapter, too.

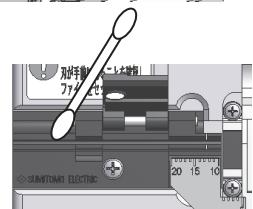

- Dust on the blade edge or the clamp might cause loss of cleaving performance or poor quality of fiber end face.
- Do not clean them with any other kind of chemicals.
- If the top clamp lever is closed leaving an off-cut fiber on the clamp, the rubber pad of the clamp will have a trace of the fiber, causing loss of cleaving performance or poor quality of fiber end face.

### Troubleshooting



Good



Poor cleave angle



Lip



Crack

If the cleaving problem occurs, the followings are possible causes.

- The fiber is placed obliquely in the cleaver.
  - Make sure that the fiber is placed straight in the cleaver.
- The blade height is too high.
  - Adjust the blade height.
- Dust or dirt remains on the clamp.
  - Clean the clamp.
- Dust or dirt remains on the blade
  - Clean the blade.
- Dust or dirt remains on the fiber.
  - Remove the fiber coating and clean the bare fiber again.

If the problem still persists, please contact our service department.

## Maintenance and repair service



If the blade is chipped and cannot cleave fiber, rotate the blade in "Manual rotation" and use the cleaver avoiding the chipped area of the blade. For rotating operation, please refer to "Switching of blade rotating operations."





Do not remove the pin which holds the blade and cleaver body. Do not remove the blade rotating mechanism either. The blade will not rotate or the blade height will change, causing loss of cleaving performance.




The FC-6R must be time for maintenance after 1 year of use or when it cannot cleave fiber. (You will be charged for blade replacement.) Please return it to our service department when the time for maintenance comes.

5: Tighten the 3 setscrews. Optimum torque: Approx. 40cNm

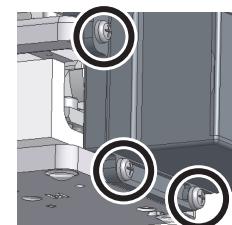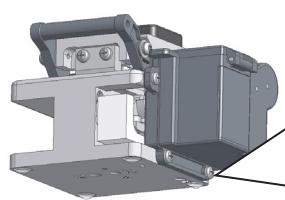


6: Completed.

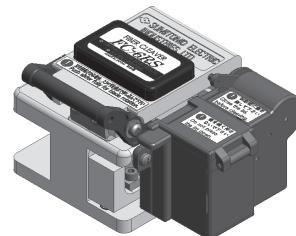

## Emptying off-cut collector

1: Remove the off-cut bin from the off-cut collector and dispose of the off-cuts in a proper way.

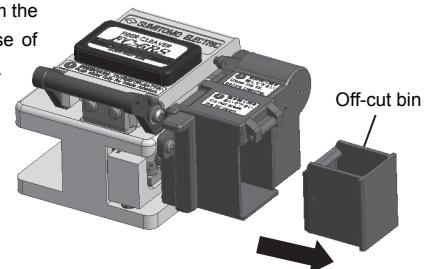

## Notice on Sumitomo genuine products



Please be very cautious of copy products that pretend Sumitomo genuine products.

The security hologram is a key to identifying Sumitomo genuine products.

- When the cleaver is turned by 90 degrees at the same place, the black and white will invert.



<Example: FC-6RS >



- Tokyo (JAPAN)  
Sumitomo Electric Industries, Ltd.  
(Global Business Dept.)  
Akasaka Center Building, 1-3-13,  
Motoakasaka, Minato-ku, Tokyo  
107-8468, JAPAN  
Tel: +81 (0)3 6406 2666  
<http://global-sei.com/sumitomo-electric-splicers>
- North Carolina (U.S.A)  
Sumitomo Electric Lightwave Corp.  
201 South Rogers Lane, Suite 100  
Raleigh, NC27610 U.S.A  
Toll Free No. 800 358 7378  
Tel: +1 919 541 8100  
<http://www.sumitomoelectric.com>
- London (U.K)  
Sumitomo Electric Europe Ltd.  
220 Centennial Park, Centennial Avenue,  
Elstree, Herts, WD6 3SL, U.K.  
Tel: +44 (0)20 8953 8118  
<http://www.sumilelectric.com>

- Hong Kong (China)  
Sumitomo Electric Asia, Ltd.  
Tel: +852 2576 0080  
<http://www.seac-cn.com/>
- Bangkok (Thailand)  
Sumitomo Electric (Thailand) Limited  
Tel: +66 (0)2 260 7231 to 5  
<http://www.set-th.com/>
- Singapore  
Sumitomo Electric Asia Pacific Pte. Ltd.  
Tel: +65 6261 3388  
<http://www.seps.com.sg/>


- Dubai (U.A.E)  
Middle East office  
Tel: +971 4 701 7338
- Gurgoan (India)  
SEI Trading India Pvt. Ltd. (SETI)  
Tel: +91 124 4577 470
- Manila (Philippines)  
SEI (PHILIPPINES) INCORPORATED  
Tel: +63 2 811 2755/2756

## 5. Fiber off-cut collector


### Installing off-cut collector

1: Open the top clamp lever fully.

2: Put the lever pin into the pin hole of the cleaver

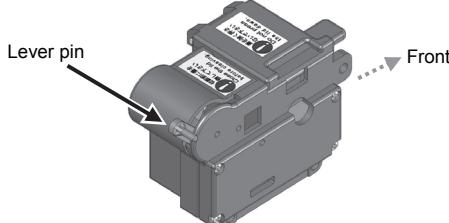


< Fiber off-cut collector CU-FC6R >

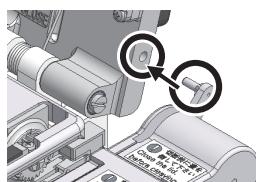

Put the lever pin into the pin hole of the cleaver.

3: Ensure that the lever pin and hook fit the cleaver properly.

<Top view>

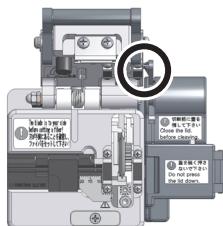

4: Align the screw holes on the cleaver with the screw holes on the off-cut collector.

